



### SPECIFICATION

Rack Dimensions	13" L x 15/16" W x 9/16" T
Rack Plate Dimensions	1-1/8" L x 4-1/4" W x 1-7/8" H
Lifting Plate Dimensions	3-7/8" W x 8" H x 3/16" T

**Important:** Read the safe information section before set-up or use of this product.

### IMPORTANT SAFETY INFORMATION

1. Use for intended purpose only. DO NOT USE FOR LIFTING.
2. Wear ANSI-approved goggles and heavy-duty work gloves during use.
3. Keep away from children.
4. Keep clear of mechanism.
5. Always inspect the Floor Jack before use, do not use if the jack is damaged or if parts are loose.
6. Do not strike handle or use extension on handle.
7. Do not use the tool when tired or under the influence of drugs or medication.
8. Always maintain the product labels and nameplate. Both are carrying important safety information.

### INSTRUCTIONS

1. This Floor Jack is designed for holding flooring strips in place during installation.
2. It can be used to help straighten warped, bowed and/or crooked flooring.
3. When starting at a straight line (usually snapped onto the sub-floor with a chalk line), nail or glue down the first flooring strip.

**Note:** The starting line should be close enough to the wall so that a strip of finish molding will cover whatever gap exists between the wall and the first strip.

4. Use the Floor Jack to apply tension to additional wooden flooring strips as they are joined to the first strip.  
Note: If you are using the Floor Jack to straighten warped, bowed or crooked flooring strips, additional force can be applied.

5. To release the jack, raise the handle fully forward to disengage the pawls. The bar is then manually retracted.

Note: No replacement parts are available for this product.